

**1100, 1500 and 1700 Series**  
**Mounting Instructions**  
**Task Lighting Using Screws**

1100 & 1700 Series Illustration

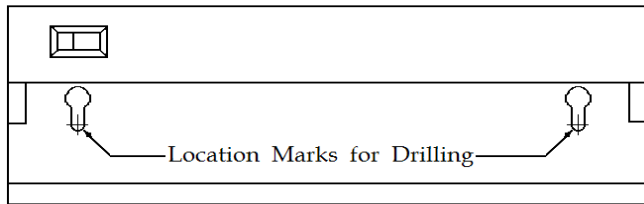


Figure 1

1500 Series Illustration

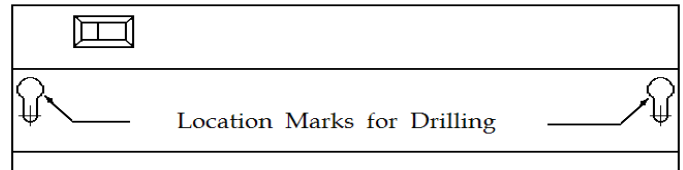


Figure 1

**~ Installation ~**

1. Remove the lens & fluorescent bulb and place light up against the underside of the shelf in the exact position that it is to be mounted.
2. Place a mark on the shelf in the center of the small end of each keyhole slot. (See figure 1)
3. Drill two 1/8" holes 1/2" deep at each mark and screw the provided mounting screws in the the holes leaving approximately 1/32 of an inch between the crew head and shelf.
4. Hold light up against shelf until screw heads pass thru the large end of the keyhold slots and push light toward the rear of shelf.
5. Light is now mounted. If light is too loose, remove light and tighten screws until a tight fit is obtained.
6. Replace fluorecent bulb and lens. Plug cord into a 120 volt/60 HZ grounded outlet.

**Lens Removal Instructions**

Push front end of the lens up into the front corner of the housing and grasp the back of the lens (See figure 2) Slowly guide the lens out along the back edge while continuing to push lens into the front corner towards the other end of the light.

1100 & 1700 Series Illustration

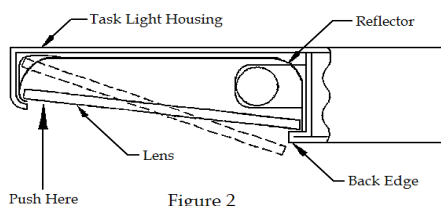


Figure 2  
(Side View)

1500 Series Illustration

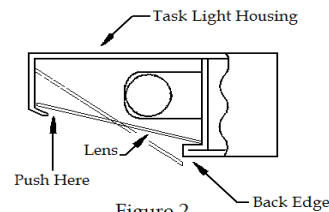


Figure 2  
(Side View)

**Note:**

If your light is furnished with cord manager clips, place them along the side of the panel you wish to run the cord and clip cord into them.

**"Caution"**

- ~ Injury to persons and damage to the light and/or mounting surface may result if the light is pulled from the surface,
- ~ Always mount light only to a surface that is mechanically sound to reduce likelihood of such injury or damage.